

Volalpha Radon Detector

Operating Instructions

To open the detector, hold it with the first finger and thumb at point 'A' and with the other first finger and thumb on position 'B'. Gently pull forwards to allow the side lugs to give way and the front to fold down.


With the front unfolded (Step 2) enter in the top box the date dd/mm/yy.

At point 'C' lift the cover and extend the detector fully (Step 3).

At point 'C' again. Fold the cover back into position by using the side lugs (Steps 4 & 5). The detector film to be clearly visible

Remove the cover strip to the self-adhesive pad 'D' on the rear side of the detector (Step 6) and [position the detector away from direct sunlight](#).

*After 90 days close the detector following the instructions in the reverse order, filling in the details overleaf and then returning to us for analysis.

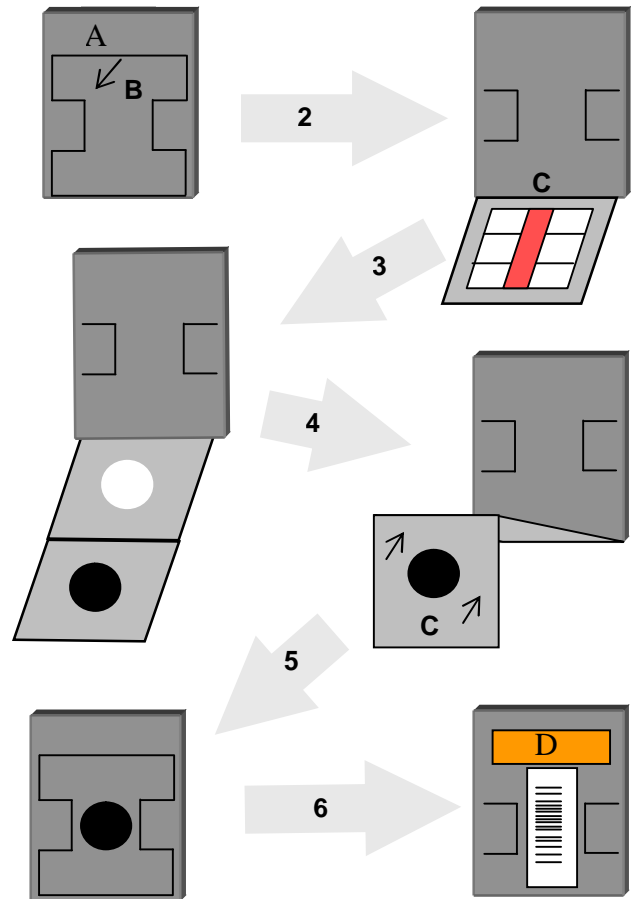

Volalpha Radon Detector

Operating Instructions

To open the detector, hold it with the first finger and thumb at point 'A' and with the other first finger and thumb on position 'B'. Gently pull forwards to allow the side lugs to give way and the front to fold down.

With the front unfolded (Step 2) enter in the top box the date dd/mm/yy.

At point 'C' lift the cover and extend the detector fully (Step 3).

At point 'C' again. Fold the cover back into position by using the side lugs (Steps 4 & 5). The detector film to be clearly visible

Remove the cover strip to the self-adhesive pad 'D' on the rear side of the detector (Step 6) and [position the detector away from direct sunlight](#).

*After 90 days close the detector following the instructions in the reverse order, filling in the details overleaf and then returning to us for analysis.

